





ARTY-SHOCK

MANUAL: FRAME ASSEMBLY


1 PARTS

- 6 Z-clips
- 14 screws
- 4 clamping piece
- 1 mounting system

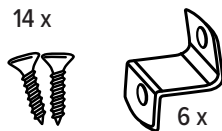

You'll need a Philips screwdriver and a hammer.


4

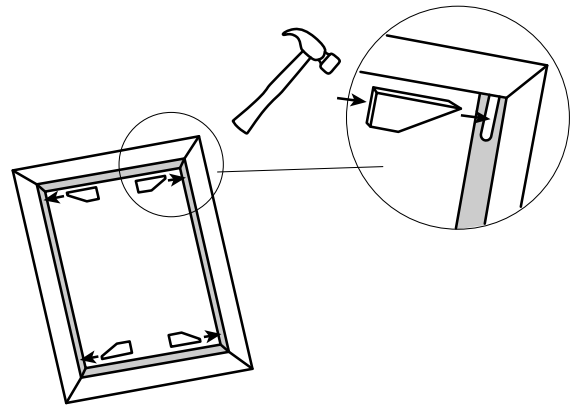


Optionally, you can stretch the canvas even more by carefully hammering the wooden clamping pieces into the four corners of the canvas.

2


Place the frame over the canvas. Please note that the back of the canvas should face up.

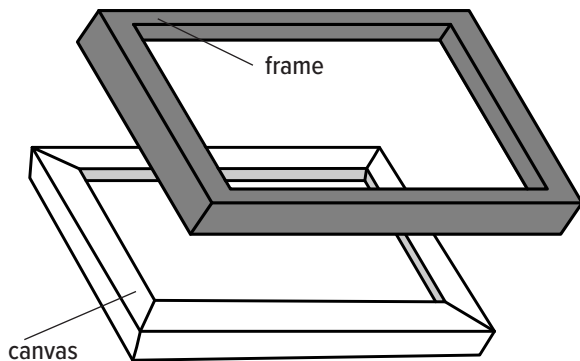

5

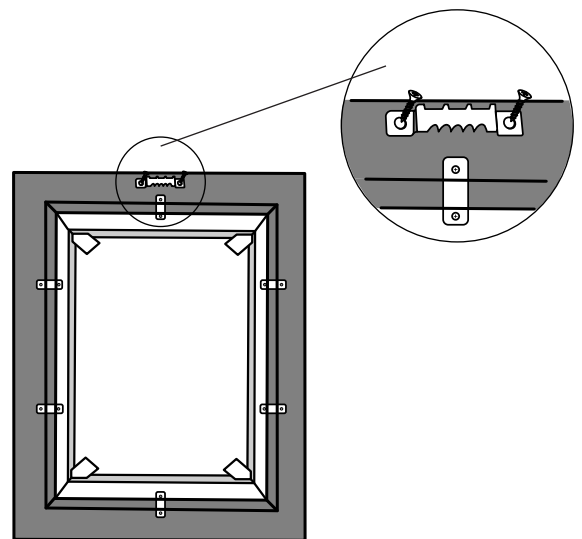

3

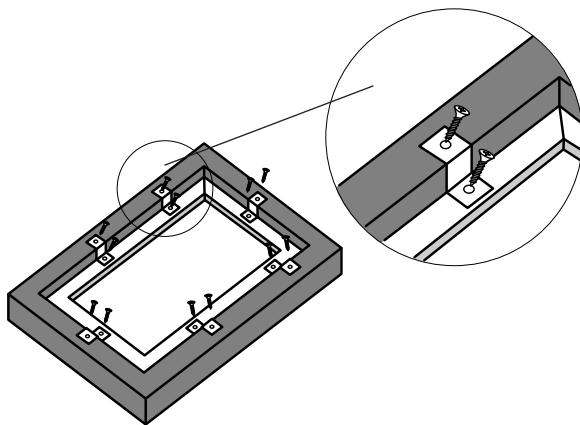

Take the Z-clips and attach them on the 6 marked points on the frame using (6) screws. Now it's easy to attach the canvas to the frame using the Z-clips and (another 6) screws.

Last but not least you attach the mounting piece to the frame using (2) screws. Make sure to position the mounting piece perfectly centered. If you don't, your artwork might end up hanging crookedly on the wall. And that would be a shame...

6

Hang your framed canvas on the wall.
Have a seat and enjoy your Arty-Shock ;-)