



ARTY-SHOCK

ASSEMBLY MANUAL U-FRAME

NEEDED


- Paintmarker
- Cleaning alcohol or ammonia
- Lint-free cloth
- Measuring tape
- Random heavy object of at least 15 kg
- Philips screwdriver

PLEASE NOTE

- Work at room temperature ($> 18^{\circ}$ Celsius) to prevent the tape from coming off, causing your Arty-Shock to fall.
- Place your Arty-Shock with the print facing down on the cardboard packaging to prevent the print from damaging.
- Did you order a Large or XL? Then assemble the U-frame with two people, so it's easier to stick on the U-frame correctly. Because once you stick it on, it's really stuck.

1

First, assemble the four parts of the U-frame by connecting each corner with the enclosed lockset.

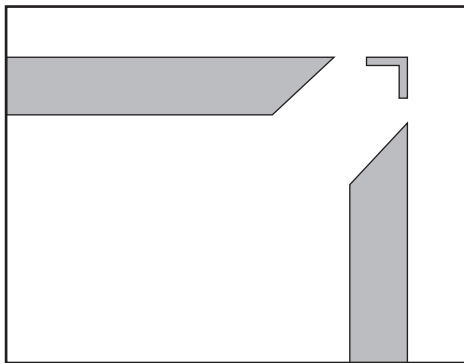


2

Clean the backside of the print using cleaning alcohol or ammonia. Make sure to dry the surface properly with a lint-free cloth.

3

On all sides, the U-frame is 10 cm smaller than your Arty-Shock. To center it both horizontally and vertically, measure and mark where the U-frame needs to be placed.

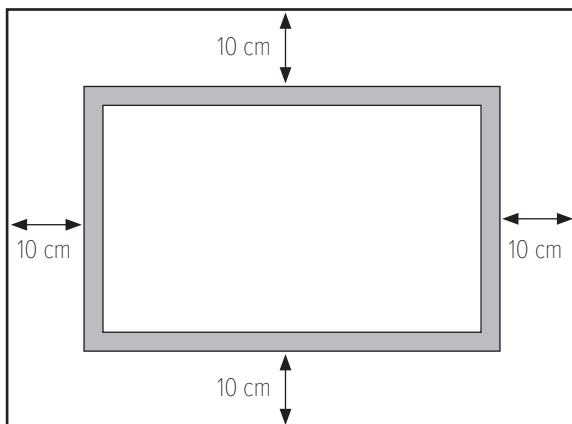

4

Remove the protection layer from the adhesive tape on the U-frame. Place the frame in the correct position on the back of the Arty-Shock. Note: once you stick it on, it's stuck!

5

After sticking on the U-frame, let it dry for at least 1 hour. Make sure you to put pressure on the U-frame by placing a heavy object on top of it. Tip: fold the cardboard packaging over the U-frame and place your heavy object(s) on the cardboard to prevent the U-frame from damaging.



6

Use at least two screws (one on each side) to hang your new art on the wall. Have a seat and enjoy your Arty-Shock ;-)

